CARE AND MAINTENANCE

AWARNING: Always unplug the product from the electrical outlet before cleaning it.

AWARNING: The Blade is sharp; handle with care.

• Remove the Lever/Blade Assembly from the Motor Housing, and then clean The Lever/Blade Assembly and the exterior of the Motor Housing with a soft, damp cloth and dry thoroughly.

 \triangle **NOTICE:** Do not use abrasive cleaners, scouring pads, or a dishwasher to clean any part of the product.

• Push the Power Cord inside the Motor Housing before storing the product in a cool, dry place.

ENVIRONMENT FRIENDLY DISPOSAL

Responsible disposal

At the end of its working life, do not throw this appliance out with your household trash.

Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

Contact your local authorities for advice on recycling facilities in your area.

SPECIFICATIONS


Power Requirement

MODEL NO GCO-28

INPUT VOLTAGE 120V ~ 60Hz Power

CONSUMPTION 70W



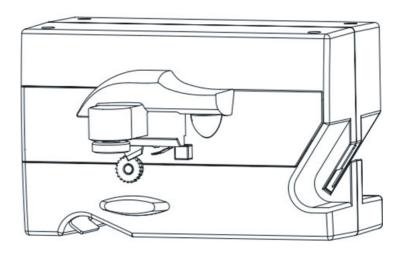

Operating and Safety Instructions

FOR INDOOR HOUSEHOLD USE ONLY



номе

UNDER COUNTER

Electrical Can Opener

USER MANUAL

SAFETY DEFINITIONS	1
WARNINGS	2
SHORT CORD INSTRUCTIONS	3
APPLIANCE PARTS	4
TO ASSEMBLE	5
CAN OPENER USE	5
SHARPENER USE	6
BOTTLE OPENER USE	6
CARE AND MAINTANANCE	7
DISPOSAL	7
SPECIFICATIONS	7

Safety Definitions

Whenever used, the follow identify safety and propert damage messages and designate a level of hazard seriousness.

This is the safety alert sym It alerts you to potential personal injury hazards.

Obey all safety messages t follow this symbol to avoid possible injury or death.

DANGER: Indicates a hazardous situation, which if not avoided, will result in death or serious injury. Usa of this signal word is limite the most extreme situation

MARNING: Indicates a hazardous situation, which if not avoided, could result death or serious injury.

CAUTION: Indicates a hazardous situation, which if not avoided, may result in minor/moderate injury.

NOTICE: Addresses practices not related to personal injury, such as product and/or property damage.

WHEN USING ELECTRICAL APPLIANCES, ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS, INCLUDING THE FOLLOWING:

↑ WARNINGS

To reduce the risk of fire, electric shock, or serious personal Injury:

- To protect against risk of electrical shock do not put plug or body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors

- Do not let cord hang over edge of table or counter.
- Do not use the product to open pressurized (aerosol-type) cans or bottles. as an explosion hazard exists.
- Do not open cans of flammable liquids such as lighter fluids.
 Do not leave the product unattended when it is in use.
- Keep hair, hands, fingers, or any other body parts from entangling with the moving parts of the product while the product is operating.
- Do not drop or insert objects into the openings of the product (except as instructed for scissors); do not block the openings of the product.
- Do not plug or unplug the product into/from the electrical outlet with a wet hand.
- Always place the product on a flat, level, stable surface.

READ ALL INSTRUCTIONS BEFORE USE

SHORT CORD INSTRUCTIONS

- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; and
- The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by the children or tripped over unintentionally.

! WARNING:


This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock, This is a safety feature,

The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not it, contact a qualified electrician.


Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

APPLIANCE PARTS

FOR HOUSEHOLD USE ONLY

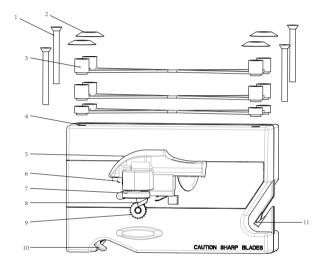

- 1. Mounting Bolt
- 2. Plastic Gasket
- 3. Fixing bracket
- 4. Fastening Thread
- 5. Lever
- 6. Lock
- 7. Magnet
- 8. Blade
- 9. Drive Wheel
- 10. Bottle Opener
- 11. Blade Sharpener
- 12. Cord Storage

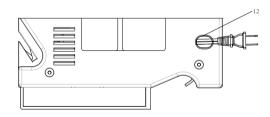


TO ASSEMBLE


- 1. Carefully unpack Can Opener.
- 2. Wipe with a soft cloth or sponge to remove small particles collected during packing and handling.
- 3. Move the lock button to unlock position, insert Lever(used to hold the can in place when cutting) to the front panel of the lever sliding it down over 'hook', with the circular surface facing down. (see Fig. 1)
- 4. Move the lock button to lock position / horizontal position(see Fig.2), it can prevent the Lever from becoming loose or falling off during use.
 - Δ **NOTICE:** Ensure the product is securely assembled before plugging it into an electrical outlet.

AWARNING: The blade is sharp; handle with care.

5. Place the product on a flat, level, stable surface and ensure the product is unplugged from the electrical outlet.

FIG. 1 FIG. 2

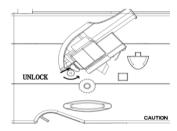


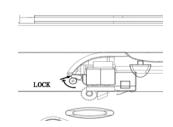

TO USE CAN OPENER

- 1. Plug the product into a standard 120-volt AC electrical outlet.
- 2. Raise the lever and align the rim of the can with the top of the drive wheel.
- **3.** Push the lever down until the blade punctures the lid of the can and the magnet attaches to the can (**SEE FIG.3**).
- 4. Push the lever further down to activate the drive wheel.
- **5.** When the can and lid have been separated, hold the can with one hand and raise the lever with the other hand to remove the can.

FIG. 3

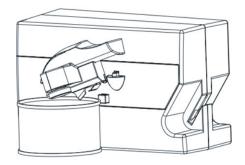

TO USE KNIFE/ SCISSORS SHARPENER

- **1.** Place Knife Blade lightly toward the right or left side of the groove. Draw knife slowly toward you with a slow, even motion.
- 2. Place Blade toward the other side and do the same. Repeat this alternating action 4 or 5 times, from one side to the other until desired sharpness is achieved.
- **3.** The Knife/Scissors Sharpener can also be used for sharpening scissors. Place one blade of the scissors in the groove, and then draw it toward you slowly and evenly. Repeat with the other Blade (see Fig.4).

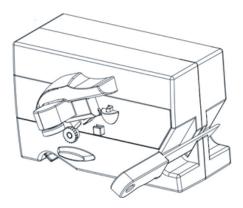



FIG. 4

SPECIAL ATTENTION:

Blades to be sharpened should be clean. Do not sharpen knives that have serrated blades.

TO USE BOTTLE OPENER

- **1.** Unplug appliance from electrical socket.
- **2.** Ensure Can Opener is secure and level. To steady, position hand on side/bottom of the Can Opener.
- **3.** Place bottle cap edge under Opener Flange.
- **4.** Apply pressure on bottle downward until bottle cap pops off(see Fig.5).

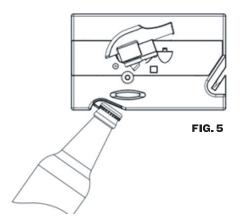

△ **NOTICE:** This bottle opener is not recommended for bottles having "Twist-Off" caps.